



## EMERGENCY KEYPAD BUTTONS

*These instructions will only work with Napco E-series & Gemini panels*

THE **BLUE** EMERGENCY BUTTONS (F, A & P) ARE ALWAYS ACTIVE, WHETHER THE SYSTEM IS *ARMED* OR *DISARMED*. THE EMERGENCY SIGNAL WILL ONLY BE ACTIVATED WHEN THE RESPECTIVE EMERGENCY KEY & THE "\*" KEY ARE PRESSED AT THE SAME TIME.

### **FIRE EMERGENCY:**

SIMULTANEOUSLY PRESS THE **BLUE** "F" & "\*", TO ALERT THE CENTRAL STATION OF A FIRE EMERGENCY.

### **AUXILIARY EMERGENCY:**

SIMULTANEOUSLY PRESS THE **BLUE** "A" & "\*", TO ALERT THE CENTRAL STATION OF SOME OTHER EMERGENCY.

### **POLICE EMERGENCY:**

SIMULTANEOUSLY PRESS THE **BLUE** "P" & "\*", TO ALERT THE CENTRAL STATION OF A POLICE EMERGENCY.

### **SILENT AMBUSH:**

For security purposes this procedure is not posted on the internet. Telephone the office during business hours (Monday – Friday 8am to 4pm) to get your personal ambush instructions.

(KEYPAD01)  
APRIL2003