



MORSE MDC16ET SECURITY ALARM OPERATION INSTRUCTIONS

Arming the System:

All zones must be closed or set at their normal state to activate the system. If the display only reads **'SECURITY BY FBN'** with no second line, this indicates that some zones are not closed. The system is ready to activate when the second line reads **'ALL ZONES CLOSED'**. Enter your 4-digit code then press the **'ARM'** key. The display will change to **'SYSTEM ALARMING, EXIT NOW'**. You then have _____ seconds to leave the building by way of the designated exit door. At the end of the exiting time period the display will now read **'SYSTEM ARMED'**; the **GREEN** MORSE logo will turn to **RED** indicating the system is activated.

A. Locating zones that are open:

1. At prompt press **'SCAN'** – the display will show which zones are open
2. Correct the zones
3. Display should read **'ALL ZONES CLOSED'**
4. Re-enter your pass code to arm the system.

- B. Request Denied – The system at times may not recognize the pass code. This may occur because 2-buttons were hit with one finger, or an invalid pass code was entered. When this occurs, press the **'CLEAR'** key twice and re-enter your pass code.

Disarming the system:

Upon entrance of the building you have _____ seconds to disarm the system. The key pad will have a buzzing sound to remind you to disarm the system and should read **'SYSTEM ARMED'** with the MORSE logo in **RED**. Enter your pass code. The MORSE logo should then turn **GREEN** and the key display should no longer read **'SYSTEM ARMED'**.

Sirens:

The sirens can always be turned off with a 4-digit code. If the sirens are heard, the Central Station will receive a signal and the proper authorities will be dispatched unless a call is received from you with your correct pass code.

WE PROTECT THE THINGS YOU TREASURE
FBN SYSTEMS INC. CENTRAL STATION
(330) 239-1229

'X' # of Alarms Occurred:

This will only display to the first person that enters the building if an alarm has occurred - note the number of alarms that occurred.

- A. Press the '**MEMORY**' key - enter the history aspect of the control.
- B. Use the '**SCAN**' key to ratchet through all of the zones that caused the alarm (note: write the zones down so they can be checked for damages).
- C. Press '**RESET**' to clear the memory after the building has been inspected.

Scan Open Zones:

This feature helps you to utilize the security control by displaying any open zones before you arm the system.

- A. Press your 4-digit code followed by the '**SCAN**' key. The display will show you, one by one, the zones and their conditions.
- B. To view each zone, press the '**SCAN**' key repeatedly, find the trouble zone, and correct the condition.

Emergency Function Keys:

These keys are active 24 hours – even if the alarm system is turned off. Note that when these keys are activated, the police are dispatched immediately – the Central Station will not verify this signal! To activate simply:

- 1. Press the 2-emergency buttons simultaneously for about 1 second – sirens will be activated and a panic signal is sent to the Central Station.

DURESS CODE:

There is a silent alarm code that is programmed into the system to enhance your protection. If someone were to force you to turn the alarm system off press '**1111**' in place of your normal pass code. This acts as if your normal code was used and disarms the system; at the same time a silent panic alarm code is sent to the Central Station and the police are immediately dispatched.

Bypass Zones:

Zones can be bypassed on a temporary basis and should not be abused (note: any zones that are bypassed are not monitored by the alarm system). The Central Station must be informed of this action prior to you bypassing a zone(s).

1. Enter your 4-digit code followed by the '**SCAN**' key until the zone you want to bypass is displayed.
2. While the zone is displayed, press the '**BYPASS**' key. The display will change from '**IS OPEN**' to '**IS BYPASSED**'.
3. Arm the control in the usual manner.

History Re view:

Enter your 4-digit code and press the '**MEMORY**' key twice to enter the '**ALL HISTORY**' aspect of the system. Press the '**SCAN**' key repeatedly to view each event in order (most recent to oldest – stores 250 events). Press the '**CLEAR**' key repeatedly to return to the normal mode when finished.