



MORSE MDC8C ALARM SYSTEM OPERATION INSTRUCTIONS
--

Arming the System:

All zones must be closed if the display reads '**SECURITY BY FBN**' with no second line this is indicating that a zone(s) is open. When all zones are closed a second line will appear '**ALL ZONES CLOSED**'. Enter your 4-digit code then press the '**ARM AUX**' key. The system display will change to '**SYSTEM ARMING, EXIT NOW**'. You have _____ seconds to leave. Once the exiting time expires the display will read '**SYSTEM ARMED**' the **GREEN** MORSE logo will turn **RED** indicating the system is armed.

Disarming the System:

Entrance of the building you have _____ seconds to disarm. The keypad will start to buzz to remind you to shut the alarm off. Enter your 4-digit pass code, the display will erase '**SYSTEM ARMED**', the buzzing on the keypad will cease and the **RED** MORSE logo will turn **GREEN**. The system is then turned off.

Request Denied:

This will occur when the system has received an incorrect pass code combination (i.e. Hitting 2-buttons at once, you entered your pass code too quickly, or it was an invalid pass code). Press the '**CLEAR**' key and re-enter your pass code.

X# of Alarms:

The first person that disarms the alarm system only after an alarm has occurred will notice this prompt on the display. Note the # of alarms that occurred, then press the '**MEMORY**' key to enter the history aspect of the control. Once the '**MEMORY**' key has been pressed use the '**SCAN**' key to ratchet through all of the zones that caused the alarm (note these zones so they can be checked for damages). Once the building has been checked you can clear the memory by pressing the '**RESET**' key.

Scan Open Zones:

This feature allows you to utilize the security control to display any open zones before arming the system. Press your 4-digit code followed by the '**SCAN**' key. The display will show you one by one the zones and their condition. To view each zone, press the '**SCAN**' key repeatedly to find the trouble zone, then go to the zone and correct the condition.

Emergency Keys:

The 2 '**EMERGENCY**' keys are active 24 hours, even if the alarm is turned off. To activate an emergency alarm at any time, press the 2 keys simultaneously for about 1 second this sounds the sirens and sends a panic signal to the Central Station.

Sirens:

The sirens can always be turned off with a 4-digit code. If you hear the sirens, Central Station will receive a signal. You must call the Central Station and give your pass code to stop the dispatch procedure.

Smoke Detectors/Fire Alarm:

Turn the sirens off with your 4-digit code. Before resetting the smoke detectors, it is imperative that you first go to each detector and look for the one that has a steady red light on in the center of the detector. This is the detector that caused the alarm (make note so if there is a problem we know which detector is faulty). When the smoke has cleared, entering the 4-digit code followed by pressing the '**RESET**' key can reset the detector.

Bypassing Zones:

This function should only be used on a temporary basis and should not be abused. You must first call the Central Station before attempting to bypass any zones and let them know what you are doing. Enter your 4-digit code followed by the '**SCAN**' key; continue pressing the '**SCAN**' key until the zone to be removed is displayed, then press the '**BYPASS**' key. The display will now be changed from '**IS OPEN**' to '**IS BYPASSED**'. This zone is now taken out of the system and it will no longer be monitored to the Central Station. Arm the control in the usual manner.