



## NAPCO 1008E ALPHA PAD SECURITY ALARM OPERATION INSTRUCTIONS

### Arming the System:

Before alarming the system all zones must be closed and you must have a steady **GREEN** 'STATUS' light on. Upon arming your 4-digit code you have \_\_\_\_ seconds to leave the building.

1. Enter your 4-digit code
2. The steady **GREEN** light will turn **RED**
3. Keypad will not make any noise
4. Leave the premise

### TROUBLE ARMING:

1. **GREEN** light flashing – indicates that you have open zones
  - a. Press & hold the '3' key to display the zone(s) that are open
  - b. Correct the zone(s)
  - c. Re-enter your 4-digit code to arm the system
2. Buzzing of keypad & a 'CHECK STATUS' – indicates that the system is trying to be set with a door open or a motion detector has not yet reset.
  - a. Enter your 4-digit code to cease the buzzing noise
  - b. Correct the zone(s)
  - c. Re-enter your 4-digit code to arm the system
3. **RED** light fails to turn on - indicating that an invalid code was entered caused by either hitting 2-buttons at once, hitting the wrong key, entered an invalid code, or entered the code too fast.
  - a. Wait 5-seconds before re-entering your 4-digit code (the system will lock you out if you do not wait 5-seconds or more).
  - b. Re-enter your 4-digit code to arm the system

### **Arming with Shunted Zones:**

1. Determine the 1 digit zone number you want to remove.
2. Press the 'S' then the zone # to remove. A **YELLOW** light will come on to let you know you have removed a zone (more than 1 zone can be shunted, enter 'S' and the zone # for each zone you want to remove).
3. Once the alarm has been configured, enter your 4-digit code to arm the system, a **RED** and **YELLOW** light will be on letting you know the system is armed.

To display shunted zones, press and hold the '2' key, all shunted zones will be shown. To place the zones back into service the system must be turned on, then turn back off; this automatically puts the shunted zones back into service.

### **Disarming the System:**

Upon entrance you have \_\_\_\_\_ seconds to disarm the system. The system will have a **RED** light and the keypad will buzz reminding to disarm.

1. Enter your 4-digit code
2. The system's **RED** light will go off
3. The buzzing will stop
4. The system is now disarmed

### **Turning Off the Sirens:**

If you make a mistake the sirens will be heard, to turn them off enter your 4-digit code. You must call the Central Station with your pass code, if not police will be dispatched.

### **Panic Keypad Buttons:**

The keypad panic is active 24 hours even if the system is turned off. To activate:

Press the '\*' and '#' key at the same time for about 1-second. Sirens will be sound and panic signal will be sent to the Central Station. To turn off the sirens, enter your 4-digit code twice.

### **AMBUSH CODE:**

This code will send a silent panic alarm to the Central Station while your system is acting normal (i.e. if the system is on when you enter the AMBUSH CODE the system will turn off etc.). The ambush code is 11 + your 4-digit code.

## **Function Keys:**

Function Keys are activated by holding down the appropriate key for about 2-seconds.

- #1 Key – Tests the sirens for a few seconds – this is not a test of the central station reporting
- #2 Key – Shows the zone number of any ‘SHUNTED’ zones when the ‘BYPASS’ display is on. To display all zones, continue to hold the function key until all zones are displayed.
- #3 Key – Shows the zone names of any open zone – **GREEN** status light flashing. Continue to hold down the function key to display all the open zones. This feature is handy to help direct you to any open zones when you are trying to arm the system.
- #4 Key – Pressing the 4 Key then arming the system with your 4-digit code will cause delay on any zone to be cancelled. This gives you a higher level of security when you lock yourself in for the evening. Before arming the system with this function, you must shunt any applicable zones. This feature is automatically cancelled upon disarming the system.
- #5 Key – This function will turn on/off the door chimes. This feature remains active through numerous arming & disarming until the feature is manually deactivated by pressing the #5 key again. When activated, while the system is disarmed, the keypad will beep for 1-second when any door zones, which are programmed to chime, are opened
- #9 Key – Causes the alarm panel to reset the smoke detectors (only after the smoke has been cleared).
- S-Key – Displays the last zone to cause an alarm. This indication will remain in the memory until it is replaced by the next alarm. If someone unfamiliar with the system resets the system without taking note of the offending zone, you can press the ‘S’ key to display the zone that caused the alarm.
- \* Key – Will list all of the hold down function keys for review.
- # Key – Displays a list of all zones

**FIRE:** The fire alarm system is active 24 hours. If a smoke detector is tripped, sirens are sound (different sound from the burglary siren) and a fire signal is sent to the Central Station. The keypad will show the Red fire light lit. The sirens can be turned off by your 4-digit code. Reset the system by holding down #9 Key after the smoke has cleared.