



NAPCO 1010 SECURITY ALARM OPERATION INSTRUCTIONS

Arming the System:

When arming the system all zones must be closed and the **GREEN** status light must be steady. After arming the system you have ____ seconds to leave the building.

1. Enter your 4-digit pass code.
2. **RED** light will come on.
3. Leave the premise.

TROUBLE ARMING:

- A. **GREEN** light flashing – An indication that you have zones open.
 1. Press and hold the ‘**3**’ key – this will display the open zones
 2. Correct the open zone
 3. Re-enter your 4-digit pass code.
- B. Buzzing at the keypad and a ‘**P**’ appears on the display – An indication that a motion detector(s) have not been reset or a door/window is open while trying to arm the system.
 1. Enter your 4-digit pass code – to cease the buzzing.
 2. Correct the open zone.
 3. Re-enter your 4-digit pass code.
- C. ‘Lock-out’ – An invalid entry. This could have been caused by entering your pass code too quickly, entered two digit at the same time, &/or an invalid pass code was entered. After the system has denied your pass code, you must re-enter it after waiting 5-seconds or more or the system will continue to lock you out.

Disarming the System:

Upon entrance of the building you have ____ seconds to turn off the alarm system. A **RED** light is on and the keypad will buzz reminding you to turn the system off.

1. Enter your 4-digit code
2. The **RED** light will turn off and the keypad will stop buzzing – the system is off.

Arming the System with Shunted Zones:

The system will allow you to remove zone(s) before arming the system (*shunted*). Before arming, determine which zones you want *shunted* by lifting the faceplate on your keypad.

1. Press the 'S' key, then enter the zone number. (You may shunt more than one zone, but you must **always** enter the 'S' key then the zone number for each zone you want shunted).
2. A **YELLOW** light will appear advising you that have removed a zone(s).
 - To display shunted zones – press and hold down the '2' key.
 - Putting shunted zones back into service – the system must first be turned on, then back off. This procedure automatically puts back in service **ALL** shunted zones.

Panic Keys:

This function of your alarm system is activated 24 hours even if the system is turned off! When the panic buttons are pressed, the Central Station receives a special alert signal; this special signal is not verified, the local authorities will be dispatched immediately.

To activate:

Press and hold the '*' and '#' keys simultaneously – the special stress signal has been sent.

AMBUSH CODE – The alarm system will act normal to the ordinary persons (i.e. if the alarm system is on, and you enter the AMBUSH code, to turn off the alarm system the system does just that, except a silent panic alarm is sent to the Central Station). Once again, this stress signal is not verified, the local authorities will be dispatched immediately!

AMBUSH CODE:

11 + your 4-digit pass code

Sirens:

Sirens can always be turned off with your 4-digit pass code. When sirens are heard, even for a second or two, you must first turn them off and call the Central Station and give them your account number and password/pass code. If an invalid password/pass code is given, the local authorities will be dispatched.

Function Buttons:

These features are activated by holding the appropriate key down for about two seconds:

- #1 Key – Test of the sirens. A signal is NOT sent to the Central Station.
- #2 Key – Display *shunted* zone numbers when the **YELLOW** light is on. You must continue to hold down the function key to display all *shunted* zones.
- #3 Key – Display open zone areas when the **GREEN** light is flashing. To display all open zones, you must continue to hold down the function key. This feature is handy when arming the system, it will help direct you to the open zones.
- #4 Key – Cancel delays on any zone. This feature is a higher level of security, best to have this function activated at night. You must shunt any applicable zones before starting this function. To activate press and hold the ‘4’ key then enter your 4-digit pass code to arm the system. When you disarm the system in the morning, the system automatically deactivates this feature.
- #5 Key – Toggle for the door chimes. This feature remain activate until it is manually disarmed. This feature alerts, by a chime at the keypad, when any programmed door/window has been opened.
- #9 Key – Re-set the system’s smoke detectors after an alarm condition and erases the ‘tattle-tale’ zone indicator. Only press the ‘9’ key after the smoke has cleared.
- #S Key – Displays the last zone that caused an alarm. This feature will remain in memory until it is replaced by the next alarm. This feature is handy when someone, unfamiliar with the system, tries to reset the system without making note of the offending zone. Upon your return, you can display the last zone that caused the alarm, make note, so it can be tested for trouble.
- FIRE Key – This feature is also activated 24 hours. If a fire detector trips, sirens are heard, and a fire signal is sent to the Central Station (fire sirens sound different than the burglar sirens; which can be turned off with your 4-digit code). The keypad will show the bottom **RED** fire light lit. Remember to reset the fire alarm system by press the ‘9’ key after the smoke has cleared.