



**NAPCO GEMINI 3200/9600  
SECURITY ALARM  
OPERATION INSTRUCTIONS**

**Arming the System:**

Before arming the system all zones must be closed, a **GREEN** status light will be on and the keypad will read **SYSTEM READY**.

1. Enter the 4-digit pass code
2. Press the *on/off* key
3. The **GREEN** status light will turn off
4. A **RED** armed light will turn on
5. The keypad will read **EXIT TIME XXX, PLEASE LEAVE NOW** – the ‘xxx’ represents the exit time remaining in 10-seconds steps.
6. Leave the building before the exit time expires.

**TROUBLE ARMING:**

- A. **INVALID ENTRY, TRY AGAIN** – will be display on the keypad. Re-enter the 4-digit pass code slowly.
- B. **ZONES FAULTED** – will be display on the keypad with the number and description of each faulted zone (**GREEN** light is off). Correct the invalid zone(s). The system’s display will read **SYSTEM READY** and the **GREEN** light will come on when all faulted zones are corrected.
- C. **SYSTEM TROUBLE** – will be displayed with an indicated trouble code (e.g. EOS-00). A 3-second tone will sound at the keypad, and the display will read **PRESS RESET KEY, CAN’T ARM SYSTEM**.
  1. Press the RESET key
  2. Enter the 4-digit pass code (pressing the reset key prior to entering the 4-digit pass code will enable you to arm the system in a trouble condition.
  3. Call the Central Station for service

#### **Arming Bypass Faulted Zones:**

Bypassed zones are *unprotected*. Be sure to call as soon as possible to have the system checked. Determine which zone(s) you want to bypass then:

1. Press the **BYPASS** key
2. Enter the 2-digit zone number (more than one zone can be bypassed, continue to press the **BYPASS** key, then the 2-digit zone number for each zone being bypassed.

(Some commercial systems require the 4-digit pass code to be entered before bypassing.)

#### **Disarming the System:**

Upon entrance of building the keypad's **RED** armed light will be on and the keypad will sound reminding you to disarm the system. The display will read: **ENTRY TIME XXX, DISARM SYSTEM**. ('xxx' represents the time remaining in 10-seconds steps to disarm.

1. Enter the 4-digit pass code
2. Press the **ON/OFF** key
3. The buzzing will cease.
4. The display light will turn from **RED** to **GREEN**
5. The system is disarmed

#### **Alarm Occurrence/Sirens:**

If the **RED** light is flashing and the display reads **ALARM**, an alarm occurred in your absence. **PROCEED WITH CAUTION!** To turn off the audible alarm; enter the 4-digit pass code and the **ON/OFF** key. After the system is disarmed, the window will continue to display **ALARM** followed by the zone(s) violated. To reset the display, press the **RESET** key.