



NAPCO 800 SECURITY ALARM OPERATION INSTRUCTIONS

Arming the System:

When arming the system you must first have all zones closed and a steady **GREEN** light must be displayed. Once arming the system you have ____ seconds to leave the building.

1. Enter your 4-digit pass code
2. The **GREEN** light will turn **RED** showing you the system is on
3. Leave the building

Trouble Arming the system:

- A. **GREEN** light flashing - indicating there is an open zone(s). When attempting to arm the system with a zone open, the keypad will buzz informing you that a zone(s) are open. Count the number of flashes on the keypad alerting you to the open zone. Check the zone list under the keypad cover to ascertain where the trouble is occurring. Correct the zone(s) and re-enter your 4-digit pass code.
- B. Entering your 4-digit pass code too quickly – always enter slowly

Disarming the System:

Upon entrance of the building you have ____ seconds to disarm. You will notice that the keypad will buzz reminding you to turn off the system and the **RED** steady light should be on.

1. Enter your 4-digit code
2. The **RED** light should go out and the buzzing will cease

Alarm Occurrence:

This will only happen if you are the first person to enter the build after an alarm had occurred in your absence. Instead of the **RED** steady light upon entrance, it will be flashing.

1. Enter your 4-digit pass code – this takes the alarm into the memory mode
2. Count the number of **RED** flashing lights – the keypad will instruct you to the zone that was violated.
3. Check the zone area.
4. Reset the alarm by entering your pass code until the **GREEN** is back on.

Bypassing Zones:

This should only be done as a temporarily solution, when zones are bypassed they are unprotected and not monitored by the Central Station.

1. Press the 'S' key
2. Enter your 4-digit pass code
3. A **RED** and **YELLOW** light will be displayed – indicating the system is now bypassed.

Disarming the system returns all zones back to normal.

Sirens:

Sirens can be turned off with your 4-digit pass code. Any time a siren is heard, even for a few seconds, the Central Station receives a signal and the local authorities will be dispatched. If sirens went off in error, turn off the sirens and immediately phone the Central Station, give them your account number and pass code to stop the local authority from being dispatched.

Panic Buttons:

This function is on 24 hours even if the system is turned off. When the panic buttons are set off the Central Station receives a panic signal and the local authorities are dispatched immediately. This function is activated by press the '#' and '*' keys at the same time.

Smoke Detector:

The smoke detector siren is one long continuous note (different than the burglary alarm). The sirens can be turned off by your 4-digit code. When the smoke alarm has been activated a steady **RED** light in the center of the detector will appear; this is the detector that caused the alarm (make a note so the detector can be checked). To reset the smoke alarm system, make sure the smoke has cleared and press the '**FIRE RESET**' button for about 5 seconds.