



## NAPCO 825HS ALARM SYSTEM OPERATION INSTRUCTIONS

### Arming the System:

All zones must be closed prior to arming the system; the system will have a steady **GREEN** light indicating that it is ready to be armed. Once the system has been armed, you have \_\_\_\_\_ seconds to leave the premise.

Enter your 4-digit pass code

The **GREEN** light will turn **RED** showing that the system has been activated.

### Trouble Arming:

1. **GREEN** light flashing – by counting the number of flashes, the keypad will alert you to the open zone. Check your zone list (under the keypad cover to ascertain where the problem is located). Correct the troubled zone and re-enter your 4-digit pass code.
2. Attempting to arm the system with the **GREEN** light flashing the keypad will buzz reminding you that there are zones open. Follow (1) instructions and re-enter your 4-digit pass code.

### Disarming the System:

Upon entrance, the keypad will have a **RED** light and will buzz to remind you to disarm and you have \_\_\_\_\_ seconds to enter your 4-digit pass code. The keypad will stop buzzing and the **RED** light will turn off.

### Alarm occurrence:

If **RED** light is flashing this is an indication that an alarm has occurred in your absence. By entering your 4-digit pass code this takes the alarm into the memory mode. Count the **RED** flashing light this will tell you which zones have been violated. Once the system has been checked, enter your pass code twice the **GREEN** light will come back on.

**Bypassing Zones:**

This should only be used on a temporary basis for any zones that are bypassed are not monitored.

1. Find that zone number that you want to bypass
2. Press the 'S' key, then the zone number (more than one zone can be bypassed; for each zone you want bypassed you must continue to press the 'S' key then the zone number).
3. Once the system is configured, arm the system by entering your 4-digit pass code (a RED and YELLOW light will be on).
4. Disarming the system will return the bypass zones back to normal.

**Sirens:**

Any time you hear the sirens (even for a moment) the Central Station receives a signal. Enter your 4-digit pass code to turn off the sirens, then call Central Station give them your account number and password. If an invalid password was given, the police will be dispatched.

**Panic Buttons:**

This function is activated 24 hours. To set the panic buttons off:

Press the '\*' and '#' keys at the same time.

This sends a panic alarm to the Central Station and the police will be dispatched immediately; panic alarms are never verified.

**Function Keys:**

These keys are activated by holding down the keys for 2-seconds

- 1-Key Siren Test-Sirens will sound for a few seconds and then automatically turn off.
- 2-Key Alarm History-Show the last alarm that occurred; the memory remains until another alarm replaces it.
- 3-Key Status Blink/Off-Converts the blinking status (**GREEN**) light to on if all zones are closed and off if any zones are open (will not display zones).
- 4-Key Instant Protection-Holding down this function key until the system beeps will cancel the delay on the entry doors. Enter your 4-digit pass code immediately after the beep to turn the alarm on. The **RED** light will now flicker to display activation of this function.
- 5-Key Door Chime-When this function is activated it causes the keypads to beep for a few seconds when the doors or windows are opened. This feature looks for the zone to be closed and then opened to activate. If more than one door or window is on a zone, only the first one to pen will cause the beep.
- 9-Key Reset Key-This function will reset the smoke detectors once tripped and/or the AC Failure indication.